


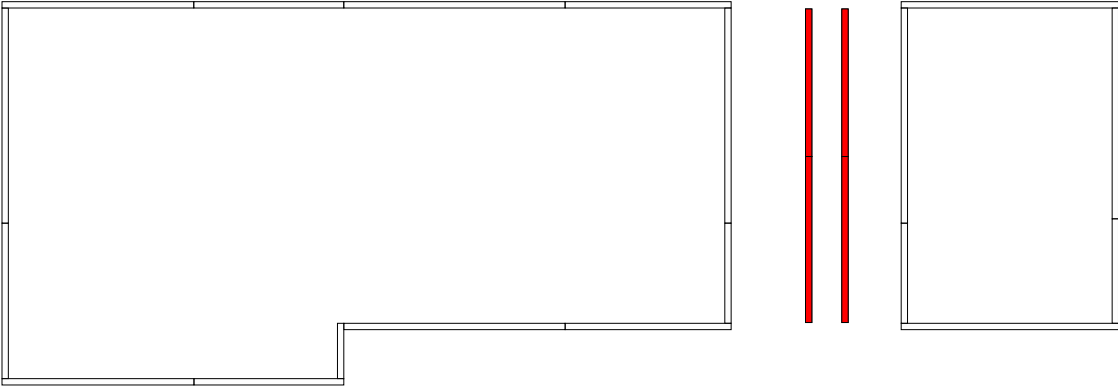

Level: 1st Floor

Bundle: EXT-1

Bundle #1 of 4



EXT-1

- ☐ Row 1: 0-E1
- ☐ Row 2: Hold 8-00 0-E2
- ☐ Row 4: Extend 3-14 0-E4
- ☐ Row 5: Extend 8-00 0-E3


Instructions to Driver



Level: 1st Floor

Bundle: EXT-2

Bundle #2 of 4

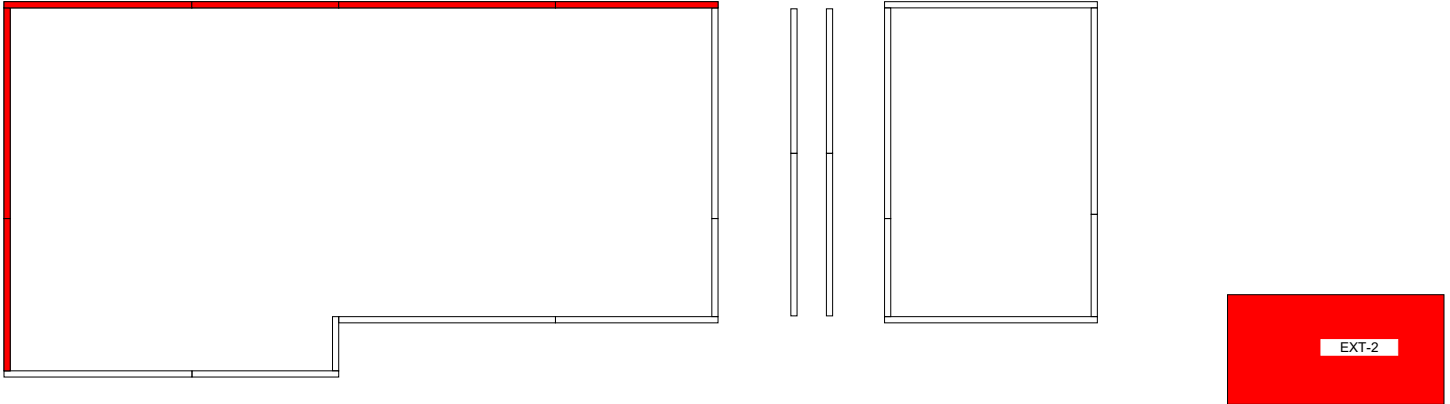

- ☐ Row 1: 1-E2
- ☐ Row 2: Extend 2-11 1-E5
- ☐ Row 4: Extend 1-11-01 1-E3
- ☐ Row 5: Hold 1-03-12 1-E1
- ☐ Row 6: Extend 4-09 1-E6
- ☐ Row 7: Hold 6-15 1-E4


Instructions to Driver



Level: 1st Floor

Bundle: EXT-3

Bundle #3 of 4

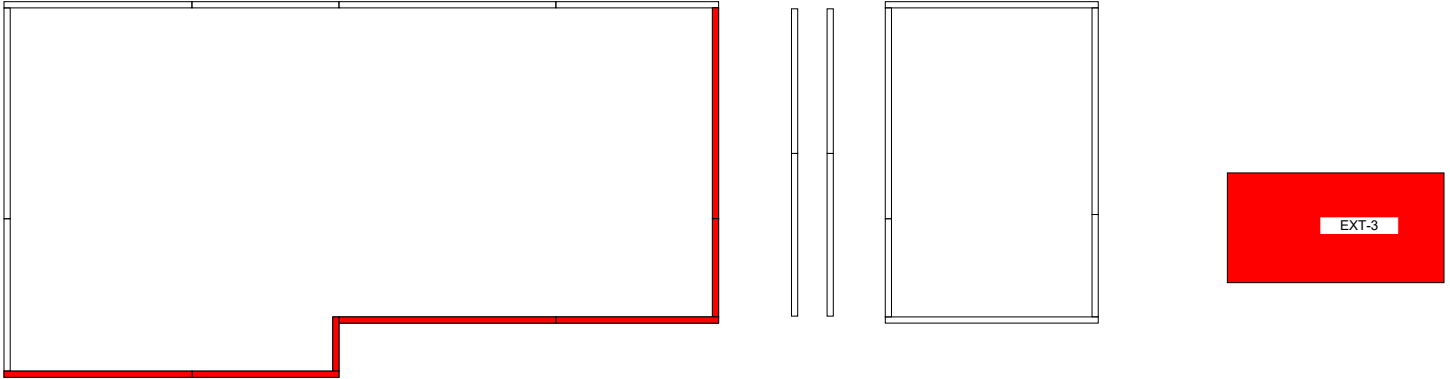

- ☐ Row 1: 1-E16
- ☐ Row 2: Hold 2-11 1-E13
- ☐ Row 4: Extend 1-11-02 1-E19
- ☐ Row 5: Hold 1-03-15 1-E14, 1-E17
- ☐ Row 6: Hold 2-05 1-E18
- ☐ Row 7: Extend 7-00 1-E15


Instructions to Driver



Level: 1st Floor

Bundle: EXT-4

Bundle #4 of 4

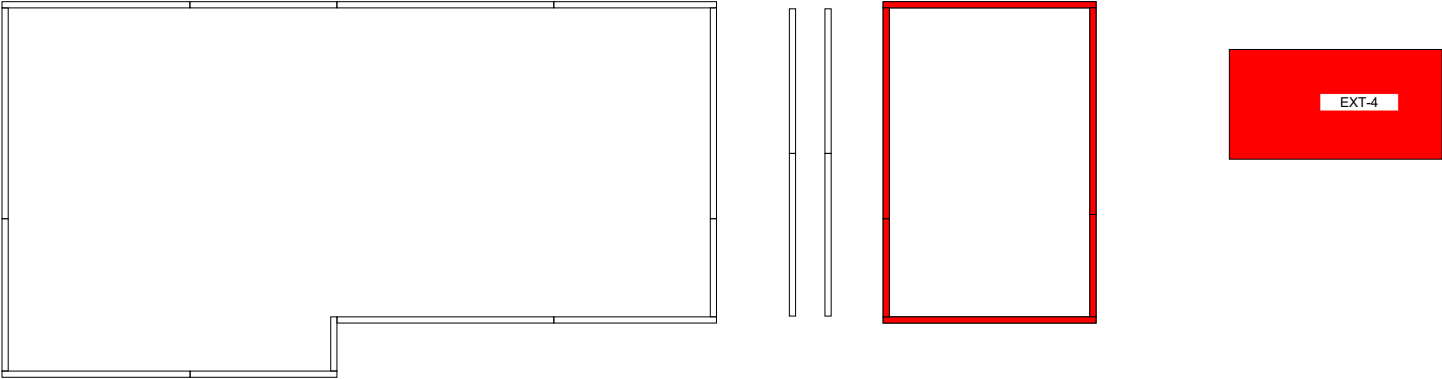

- ☐ Row 1: 1-E12
- ☐ Row 2: Extend 0-15 1-E7
- ☐ Row 4: Extend 2-07-05 1-E8
- ☐ Row 5: Hold 2-13 1-E9, 1-E11
- ☐ Row 6: Extend 5-10 1-E10

Instructions to Driver